BMW 335i (N54) Maintenance Schedule

Version 1.1b, Note: All numbers in miles, use this at your own risk.. Information partially derived from the "Old School Maintenance Schedule v04 2009")

	2,2	S /5	\$ 15	100 /22 100 /22	30/30	100 / 31.	00/25	100/5/	00/00	00/01/	00 /50 /50	10 / 2V	00/00	50 /5	10 /0°	000/172	200/20	00/27	120 /25 / 25 / 25 / 25 / 25 / 25 / 25 / 2	000 /2	150 /50 /50 /50 /50 /50 /50 /50 /50 /50 /	100 /51	120 /20	000/27	10 /20 /	000 /	10/25	00/202	100 /000
Oil & Filter Change Replace every 7,500 BMW Recommends every 15,000	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Tires Inspect tread depth, wear pattern, condition, inflation pressure Replace when below minimums	ı	I	I	I	ı	I	ı	ı	ı	1	I	ı	-	ı	ı	-	-	_			1	_	-	1	I	-	I	-	1
Battery Inspect state of charge every 15,000 Replace on failure			ı		ı		I		ı		ı				1		-				I		I		ı		I		ı
Wheel Alignment Inspect every 15,000 or every year BMW recommends yearly and when replacing tires			1		1				_								-		-		1		1		1		1		1
Brake Fluid Replace every 30,000 or every 2 years BMW recommends every 2 years					R				R				R				R				R				R				R
Manual Transmission Clutch Fluid Replace every 30,000 BMW recommendation unknown					R				R				R				R				R				R				R
Interior Air Filter Replace every 15,000 BMW recommends 15,000			R		R		R		R		R		R		R		R		R		R		R		R		R		R
Engine Air Filter Inspect every 15,000, replace every 30,000 BMW recommends 45,000			1		R		ı		R		(+		R		1		R		ſ		R		ſ		R		ĺ		R
Change Engine Coolant Inspect PH/hydrometer every 15,000 or every year Replace every 30,000 or every 2 years BMW states lifetime fluid			ı		R		I		R		_		R		ı	\	R		I		R		Ι		R		I		R
Power Steering Fluid Change every 30,000 BMW states lifetime fluid					R				R				R				R				R				R				R
Manual Transmission Gearbox Oil Change every 60,000 BMW states it is a lifetime fluid	R								R								R								R				

BMW 335i (N54) Maintenance Schedule

Version 1.1b, Note: All numbers in miles, use this at your own risk.. Information partially derived from the "Old School Maintenance Schedule v04 2009")

	2,75	S/15	8 /5°	300/2	30/30	30/31	100 /s	20/27	0 0	100 / ST	700 /5°	200 /2	500 /00	500 /	00 /0°	000/17	500/30	000/27	100 /25 / 25 / 25 / 25 / 25 / 25 / 25 / 2	000 /2	100/20	000/57	10 / 10 / 10 / 10 / 10 / 10 / 10 / 10 /	000/17	120/20	000 /20	100 / 155	Jag /2/2	
Differential Oil Change every 60,000 miles BMW states it is a lifetime fluid	R								R								R								R				
All-Wheel-Drive Transfer Cases Change every 30,000 BMW states it is a lifetime fluid					R				R				R				R	2			R				R				R
Spark Plugs Replace every 45,000 BMW recommends 45,000							R						R						R						R				
Automatic Transmission Fluid & Filter Replace every 60,000 BMW recommends 100,000									R							1	R								R				
Fuel Filter Replace every 150,000 or on failure BMW states lifetime filter										1											R								
Engine Drive Belts Inspect every 15,000, replace 120,000 BMW recommendation unknown			ı		I				-		ı		I		I		R		-		I		I		I		ı		ı
Oxygen Sensors Replace every 120,000 or on failure BMW recommends 120,000																					R								
Water and Fuel Hoses Inspect every 30,000, replace every 150,000 BMW recommendation unknown					I								1								R				ı				I

I = Inspect, R= Replace