*Necessary preliminary tasks:*


- Remove front seat

**Warning!**

Read and comply with safety regulations for handling airbag modules and pyrotechnical belt tensioners.

Improper handling can lead to triggering of the pyrotechnical seat belt tensioner or side airbag, resulting in injuries.

Switch off ignition!

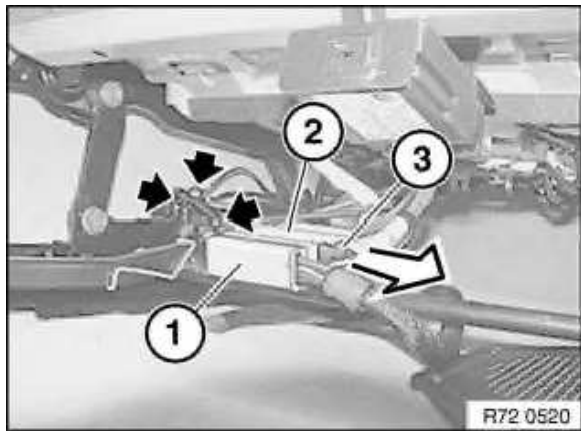

Unfasten plug connection (1) and disconnect.

Unlock plug connection (3) and pull all plugs out of plug housing (2).

Disconnect all cable straps.

Removing wiring harness.

Installation:

- Replace cable straps
- Wires must not be under tension
- Plugs are coded and must be reinstalled in the correct sequence in the plug housing


Only in event of replacement for E87 with build date before 09/2004:


New seat belt tensioners are supplied with belt buckle contacts which are not required before this build date.

- Disconnect contacts at pin 14 and pin 15
- Tie both contacts to rear

Note:

Clear all fault memories and code car again.

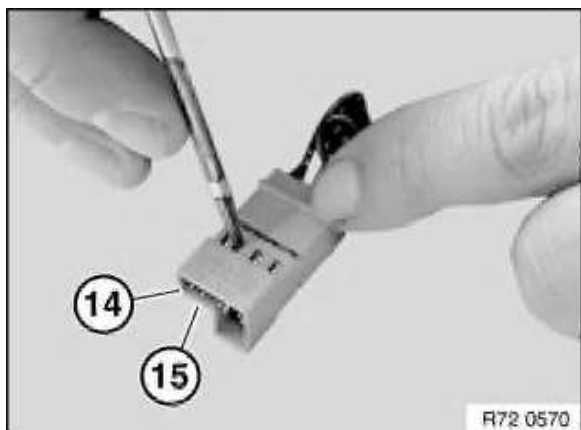

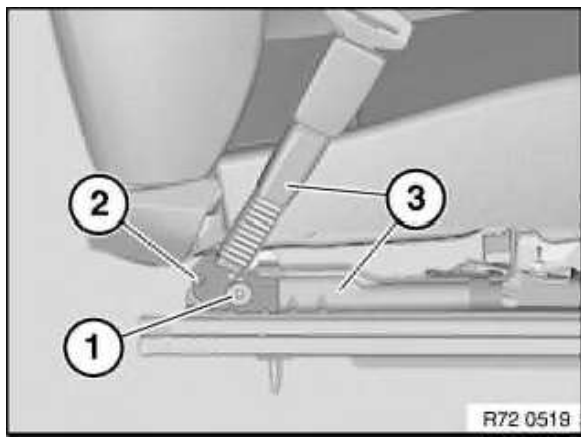

Release screw (1).

Tightening torque 72 11 6AZ .

Remove belt tensioner (3).

Installation:

Belt tensioner (3) is secured through recess (2) to retaining bracket.