


PROCEDURE

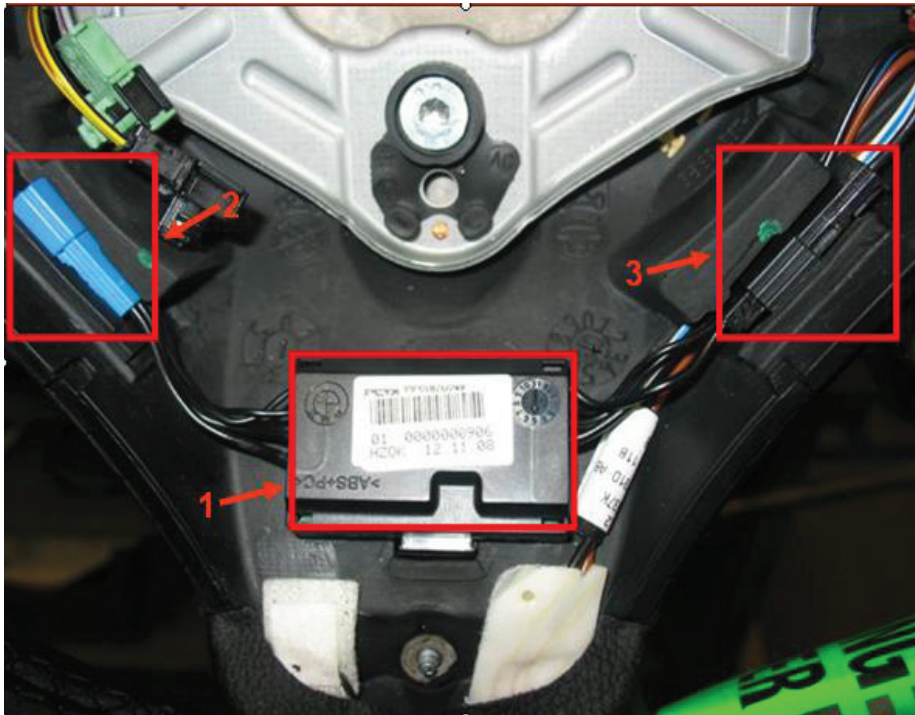

1. Replace the steering wheel heating module (1). Connect plug connectors (2) and (3) to the steering wheel harness.

Note: Steering wheel shown with trim removed for clarity.