## Short manual for BMW Tool32 short counter reset.

## Common Error 9CBB

Have spent quite a lot of time researching until finally got it done properly. Due to lack of information how to do it, I have decided to sum up my findings all over the internet. Hope this saves someone lots of time of Googling... Estimated time to do it is no more than 10 minutes, assuming that you already have INPA working properly, and have DATEN file which corresponds to your FRM2 module. I have done this on E70, '09 year, it had FRM2 module. So the manual is based on my own experience, and my searching results. YOU DO THIS ON YOUR OWN RISK! I TAKE NO RESPONSIBILITY FOR YOUR OR MINE MISTAKES THAT CAUSED ANY DAMAGE!!! So here we go: Open Toolset32 (it's a part of BMW standard tools package) you'll see a screen similar to mine. Choose: File→Load SGBD, Group File Or just press F3 EDIABAS Toolset 32 - B 🗙 Job Test Configuration Trace Windows Help ei dei en die a ? 💥 6 Version 4.0.3 **EDIABAS ToolSet 32** BMW AG 1/10/2014 10:33:16 🥐 start 🚽 🕼 😂 😨 🚟 🦉 🖏 EDIABA 🕜 🚇 🛒 💱 10:33 AM 1. Next you have to load the .prg file. Choose *FRM\_70.PRG* switch the ignition ON assuming that the cable is already connected to the car and your PC and then click *Open*.

EDIABAS Too	olset 32 Configuration Tra	ce Windows Help					- BX
Load SGBD, Gro	oup file			? 🔀			
Look in: Look in: My Pacent Desktop My Documents My Concurrents Computer	Ecu FIDIDAZE.PRG FAA.PRG FAA.LSS.PRG FAAL_SS.PRG FAAL_SS.PRG FAAL_SS.PRG FAS_S3.PRC FAS_S3.PRC FAS_S5.PRG FAS_S5.PRG FAS_PCS.PRG FBI_ES.PRG	If dm_50.prg       If dm_50_ls.prg       If dm_70.prg       If PM_70.Prg       If PR_FX0.Prg       If PR_FX0.Prg       If PR_70.Prg       If PR_70.Prg		PZD3.PRG FZD3.PRG FZD3.PRG FZD3.PRG FZD3.PLG FZD3.PLG FZD3.PLG FZD3.PLG FZD3.PLG FZD3.PLG GS7X_K.PRG GS7X_K.PRG GS74_K.PRG GS19.PRG GS19.PR	BAS ToolSet 32		Version 4.0.3 BMW AG 1/10/2014 10:34:18
My Network Places	Files of type:	SGBD * prg ☐ Open as read-only	×	Cancel			
🐉 start	C) 🔄 😨 🖀	* 🐻 EDIABAS Too	set 32 🛛 谢 1.JP	G - Paint			🔇 🚇 🛒 💱 10:34 AM
		Contraction of the second s				NEED.	1 martine and the second se

2. This is what you get when opened. Remember to connect the cable to the car first, *switch Ignition*, and only then try to *open* the *.PRG* file. Before going any further, you should find which line has 'shut down' due to short, and check the short count.

	VIII III			101001010		
EDIABAS Toolset 32						- 8 🛛
File Job Test Configuration Trace Windows	s Help					
<b>e de le e</b> nt e	7 <u>7</u> <u>8</u> ? }	K				
		EDIA	ABAS Tool	Set 32		Version 4.0.3 BMW AG 1/10/2014 10:35:45
Select Job: FRM_70				ol 🖬 🔟	-Info	
Jobs Info Info diagnoseprotokal_esen diagnoseprotokal_esten ident Is_losschen pruefstempel_esen pruefstempel_esen pruefstempel_esen is_losschen pruefstempel_esen is_losschen	Arguments Data: [	cu orin orino autor comment package sprache	Results	resu y co resu y co resu y co resu y y co resu y y co resu y y y co resu y y y co resu y y y co resu y y y co resu y y y co resu y y y co resu y y y co resu y y y co resu y y y co resu y y co resu y y co resu y y co resu y y co resu y y co resu y resu y co resu y resu y co resu y resu y co resu y resu y co resu y resu y co resu y resu y co resu y resu y co resu y resu y co resu y resu y co resu y resu y co resu y resu y resu y co resu y resu y resu y resu y resu y resu y resu y resu y resu y resu y resu resu y resu y resu y resu y resu y resu y resu y resu y resu y resu y resu y resu y resu y resu y resu y resu resu y resu resu resu resu resu resu resu resu	<pre>: INFO ment: INFOrmation SGDD lt : ECU pe : string ment: Steuergerät in Klartext lt : ONIGIN pe : string ment: Steuergeräte-Uerantwortlicher lt : REVISION pe : string ment: Veuergeräte-Verantwortlicher lt : REVISION pe : string ment: Versions-Nummer lt : OUMENT pe : string ment : Kanen aller Autoren lt : COMMENT pe : string ment : wichtige Hinweise lt : PACKAGE pe : string ment : Include-Paket-Nummer lt : SPRGHE pe : string</pre>	
					Line= 1 of 1, Column= 1	only
🥐 start 🚽 🕑 😂 😨 🚟 👋 🖏	EDIABAS Toolset 32	2.JPG - Paint				🕜 🚇 🕵 😚 10:35 AM

3. From 'Jobs' list, scroll down and select 'status\_lampen\_kurzschlus\_counter', then hit 'F5'. Check the 'Results' window, here you see all available line 'names'. Check the name of the line which after word '\_counter =" has different value than '0'. This is the one that you probably need. Note it, you will need it later. Minimize the results window for now.

EDIABAS Toolset 32		
File Job Test Configuration Trace Windows Help		
Sedse en, Mae 8 ? 💥		
	EDIABAS ToolSet 32	Version 4.0.3 DMW AG 1/10/2014 10:39:51
Sa Select Job: FRM_70		Job-Info
Jobs Arguments Data: LAMPAR-Gule C-La_chemic LaMPAR-Gule C-La_chemic LaMPAR-Gule C-La LAMPAR-Gule C-La LAMPAR-Gule C-La LAMPAR-Gule C-La LAMPAR-Gule C-La LAMPAR-Gule C-La LAMPAR-Gule C-La LAMPAR-Gule C-La LAMPAR-Gule C-La LAMPAR-Gule C-La LAMPAR-Gule C-La LAMPAR-Gule C-LA LAMPAR-Gu	Results       b.stote     Results       ab.stote     counter       counter     o       counter     o <td< td=""><td><pre>isTATUS_LAMFEN KUR2SCHLUSS_COUNTER comment : KWP2000 : S0 inputUtputUsControlByLocalIdentifier S0 ReportCurrentState S2 Lamponkuurzschluss Zaehler auslesen Status LampenkurzschlussZaehler (explizit) von FRM Comment : 000 STATUS Comment : 000 STATUS Comment : 000 STATUS STAT_FL_LINKS_SHORT_CIRCUIT_COUNTER type : int comment : Fernlicht links bzw. Abbiegelicht links SHORT_CIRC type : int comment : Fernlicht rents bzw. Abbiegelicht rechts SHORT_CIRC type : int comment : Fernlicht rechts bzw. Abbiegelicht rechts SHORT_CIRC type : int comment : Fernlicht rechts bzw. Abbiegelicht rechts SHORT_CIRC type : int comment : Fernlicht rechts bzw. Abbiegelicht rechts SHORT_CIRC type : int comment : Abblendlicht links SHORT_CIRCUIT_COUNTER type : int comment : Farl_AL_RECHTS_SHORT_CIRCUIT_COUNTER type : int tht : int tht</pre></td></td<>	<pre>isTATUS_LAMFEN KUR2SCHLUSS_COUNTER comment : KWP2000 : S0 inputUtputUsControlByLocalIdentifier S0 ReportCurrentState S2 Lamponkuurzschluss Zaehler auslesen Status LampenkurzschlussZaehler (explizit) von FRM Comment : 000 STATUS Comment : 000 STATUS Comment : 000 STATUS STAT_FL_LINKS_SHORT_CIRCUIT_COUNTER type : int comment : Fernlicht links bzw. Abbiegelicht links SHORT_CIRC type : int comment : Fernlicht rents bzw. Abbiegelicht rechts SHORT_CIRC type : int comment : Fernlicht rechts bzw. Abbiegelicht rechts SHORT_CIRC type : int comment : Fernlicht rechts bzw. Abbiegelicht rechts SHORT_CIRC type : int comment : Fernlicht rechts bzw. Abbiegelicht rechts SHORT_CIRC type : int comment : Abblendlicht links SHORT_CIRCUIT_COUNTER type : int comment : Farl_AL_RECHTS_SHORT_CIRCUIT_COUNTER type : int tht : int tht</pre>

There are 3 minimized windows, take up the '*Tabellen-Info*' window. From the drop down list choose the '*LAMPNRTEXTE[3][39]*', click on it and the info you get is marvelous  $\rightarrow$ 

This is what I have found so hard to understand what to write in the 'arguments' window. These are the 'lamp/line' numbers, it will make way much easier to find exactly what you need.

Remember what you noted before and find the corresponding name in the list, then double click in the 'LAMPNR' column, it will insert the needed data in to the 'arguments' window. Now minimize 'Tabellen-info' window and take up the results window. You will need it later.

EDIABAS Toolset 32		
File Job Test Configuration Trace Windows Help		
<b>B</b> I <mark>de: En. 175 8 ?</mark> 🞇		
© ~==	EDIABAS ToolSet 32	Version 4.0.3 BMW AG 1/10/2014 10:37:19
Select Job: FRM_70	ofnl-doL 🔤 🛛	
Jobs Arguments Data:	name : INFO	
info ^ LAMPNB:0x1E	comment : Information SGBD	
diamorenrotokoll Jeren	Tabellen-Info	
diagnoseprotokoll_setzen Clear Argument wizard		
ident	ec LEHIPARIEXIE[3][39]	:
fs_lesen_detail	TEXT A	
fs_loeschen	au 0x15 AUSGANG_KZL Kennzeichenlicht	
pruefstempel_schreiben	pa 0x16 AUSGANG_INNENBELEUCHTUNG Innenbeleuchtung	licher
normaler_datenverkehr	<pre>sp 0x17 AUSGANG_NSL_LINKS Nebelschlusslicht, US: Break</pre>	
fs_sperren	0x18 AUSGANG_NSL_RECHTS Nebelschlusslicht, US: Break	
is_lesen	0x19 AUSGANG_RFL_LINKS Rueckfahrlicht links	
is loeschen	0x1A AUSGANG_RFL_RECHTS Rueckfahrlicht rechts	
hs_lesen	0x18 AUSGANG_BFD_LINKS Break-Force-Display links	
diagnose_ende	UXTC HUSGHNG_BFD_RECHTS Break-Force-Display recits	
	UK ID HUSGHNG_DRE_LINKS Tagrainfilter LinkS	
	UXTE_HUSGHNG_URL_REGITS Tagrainfiltit recits	
	UX IF HUSGHNG_ALEMINE_SGG REPAIRS SGY	
	8x21 NUSUNNU_SNU 8x22 AUSCANC FRA ZUSATZ   INKS FRMSR+ Zusatz-Fabrichtungs	
	8v23 AUSCANC FRA ZUSATZ RECHTS FRMMR. ZUSATZ-Fahrtrichtungs	
	By2h AUSCANC FUSSPALIN FUELTS FRM3P Fusspaneto	
	8x25 AUSGANG R56 CS GRUEN ERM3R: PL3: Colour-Switch Gru	
$\nabla 7/$	AFF INKNOWN unbekannte Lampe	
$\mathbf{V}^{+}$		×
V		
La Simula 🗇 🗖 🕅		
	Line= 31 of 39, Column= 1	read only
🔧 Start 🔰 🧭 😂 😨 🚟 🎽 🐻 EDJABAS Tookset 32 🛛 🦉	JPG - Paint	🖉 🚇 🛒 10:37 AM

4. It is time to do the actual reset procedure.

In the 'Jobs' scroll list find 'steurn\_reset\_kurzsclussab...', click on it. In the 'arguments' window you should have some text and numbers like 'LAMPENR;0x1E', inserted from earlier steps. Make sure checkbox next to 'Data' has a tick in it. Hit **'F5'**. And You are done!

*'steurn\_reset\_kurzsclussab...'* is what worked for me. I found that others report that they have chosen *'\_reset\_kurzschluss\_sperre'*. I have tried both of them, and it seems that it didn't do any harm to my vehicle. Make sure that in the *'Results'* window JOB\_STATUS says OKAY.

PS.: When I did mine it didn't say OKAY, but after few tries I got OKAY, and after few seconds I got my DRL light working again! YAY.

Tet. Configuration Trace Windows Help     Image: Configuration Trace Help	:38:44
Image: Second	:38:44
Version 4.0.: PMW AG 17/02/2014 1 Sa Select Job: FRM_70 Arguments Date: UNIT WORKER	:38:44
Image: Speak of the speak o	1:38:44
S₂ Select Job: FRM_70	
Jobs Arguments Data:	
COMPERT : KUrzschlusssberre ueber vladnose ausschalten	
C_fo_seenKWP2000: \$30 InputOutputCoalIdentifi	er 👘
c-for owned was a solution of the solution of	_
Argumente: 1 Argum	_
stotus_innpen_tursubius_wie argument : LAMP_NR stotus transpon_tursubius_wie	_
status_1 (***) Results connent : status_6 (***) indo/**BR 70*** reset kurzschluss snerre* ***AMPNR*R*I******	_
statur of result : .00 STATUS statur of result : .00 STATUS	_
tabu 08.EET = frn_70 connert: UKAY, wenn fehler/frei table JOAResult STATUS TEXT	_
	_
JOBSTATUS - COMPACT - COMP	_
	_
	_
JOB STATUS - DKAY	_
_TEL_MHTWORT = 7 Bytes 0000 : 83 F1 72 70 1F 08 7D ?ñrp}	_
	_
Line 1 of 17. Column 2 read only	
A STOR O C C C C C C C C C C C C C C C C C C	10:38 AM
CONTRACTOR OF THE OTHER TODALS TODALS TODALS TO AND A DAY OF THE OTHER TODALS T	10:38 AM