


3. Installing the Performance silencer

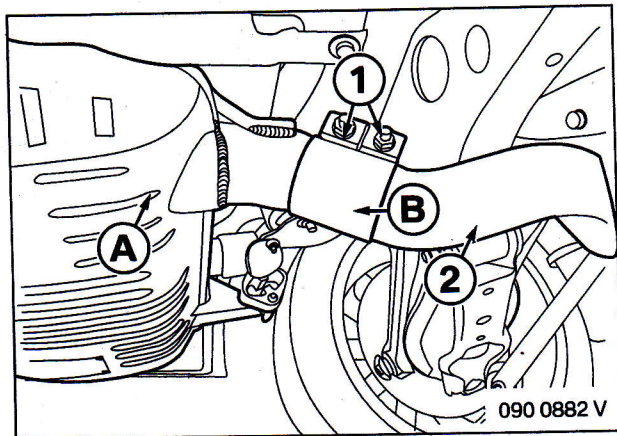

☐ In order to ensure adequate ground clearance, the screws (1) must not be below the pipe geometry and must be directed appropriately upwards, as shown in the figure. The screws (1) must have a distance of **20 mm** to all neighbouring components. ◀

Secure Performance silencer **A** to the vehicle and slot into clamp **B** so that Performance silencer **A** adjoins flush with the entrance pipe (2). Align clamp **B**, tightening the screws (1) to **70 Nm**.