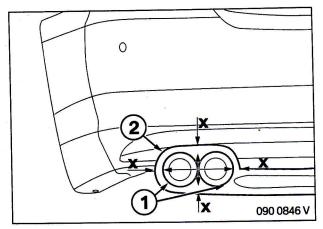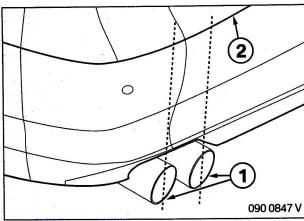## 4. Concluding work and coding

The retrofit system does not require coding.

- Carry out a brief test (testing of the tightness and secure positioning of the rear silencer)

090 0846 V

▷ Check the position of the end pipes (1) to the contour (2) of the rear apron, if necessary averaging and aligning them again. ◀

090 0847 V

▷ During installation and while driving (thermal expansion of the exhaust system), care must be taken to ensure that the end pipes (1) do not extend beyond the rear apron (2). (Danger of burning!) ◀