



3. Installing the Performance silencer

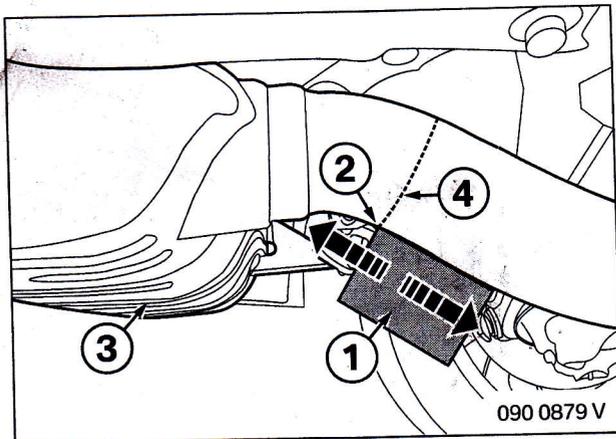


Using a suitable flat object (1), determine and mark (4) the start of the curve (2) of the entrance pipe into the rear silencer (3) by moving the flat object (1).

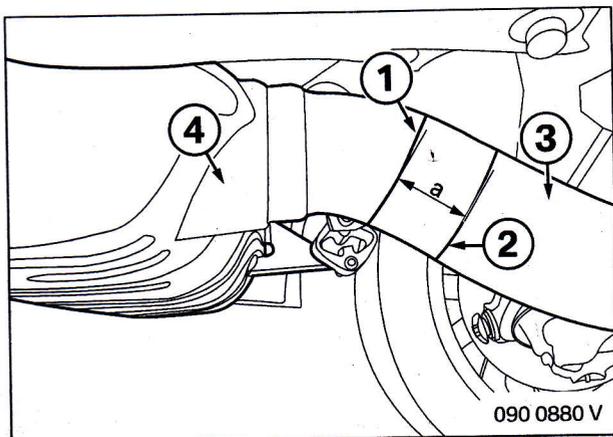


From the marking (1), draw a mark (2) at a distance of $a = 40 \text{ mm}$ on the entrance pipe (3).

Cut the entrance pipe (3) using suitable tools at the mark (2) and deburr.

Remove the rear silencer (4) from the car.

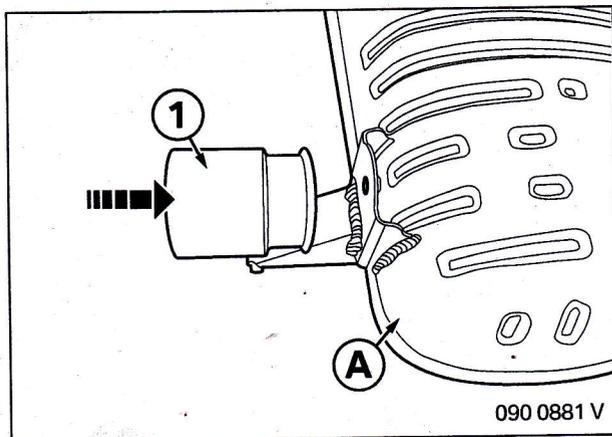

Uninstall acoustic distributor (1) on the standard silencer (not shown) and fit it to Performance silencer **A**.

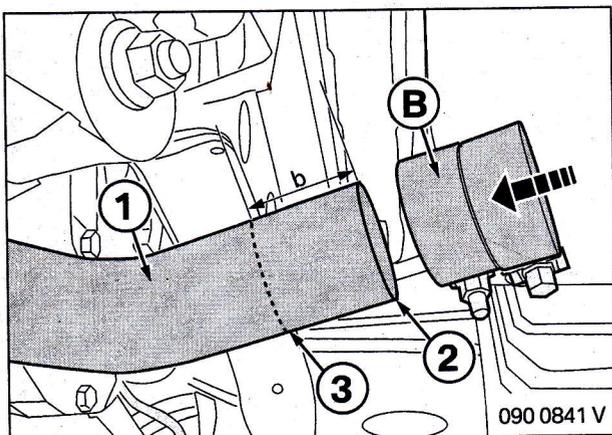

Mark the entrance pipe (1) from the cut end (2) with a distance of $b = 35 \text{ mm}$ (3).

Push the front end of clamp **B** up to the mark (3) on the entrance pipe (1).