


Special tools required:

- 11 0 331
- 11 6 480



Necessary preliminary tasks:


- Remove front splash guard.
- If necessary, release bracket on A/C compressor.

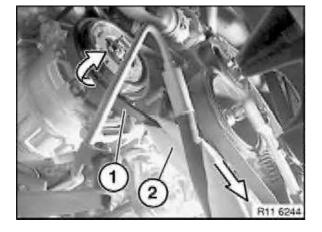

Rotate engine with special tool 11 6 480 in direction of engine rotation.

At the same time, pull off drive belt (2) towards front in direction of arrow using a clean cloth (1).

Remove drive belt (1) towards front.

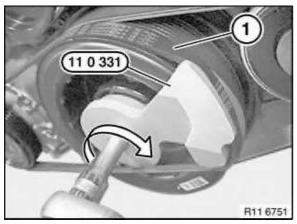

Fit drive belt (1) on A/C compressor.

Mount drive belt (1) with special tool 11 0 331 on belt pulley in direction of arrow.



Installation:

Check installation position of drive belt.

Assemble engine.